

### SPI - Scan Product Info

DK



### SPI - Scan Product Info

UK

På dette produkt kan man scanne ventilens QR-kode og få alle relevante informationer, så som IOM, direkte på sin smartphone. Desuden giver programmet mulighed for at sende en forespørgsel til DVC.

This product can be QR-scanned directly on the valve body. All relevant informations, like IOM, will be displayed directly on your smartphone. The program will allow you to make an inquiry to DVC.

### Vigtig sikkerhedsinformation

DK



### Important safety informations

UK

Læs denne vejledning grundigt inden installationen af kuglehane påbegyndes. Anvend ikke ventilen til højere tryk eller temperaturer end angivet i databladet. Forkert anvendelse kan medføre skader på personer og/eller materiel.

Carefully read this instruction before installation of the ball valve. Do not use the valve for higher pressure or temperature than allowed in the datasheet. Improper use can lead to person injury or broken material.

### Rørføring generelt

DK


 


### General pipe alignment

UK

- Rørføringen skal være præcis oplinet uden forskydninger i rørsystemet.
- Der skal være netop den afstand mellem flangerne svarende til kuglehaneens indbygningsmål
- Inden ventilen tages i brug skal rørsystemet gennemskylles grundigt.
- Der skal etableres understøtning af rørføringen.

- Pipe alignment have to be accurate without displacement
- The distance between valve flanges have to be exactly like the "face to Face" of the valve body.
- The pipe and valve have to be flushed before operating the valve first time.
- Support of the pipework have to be established.

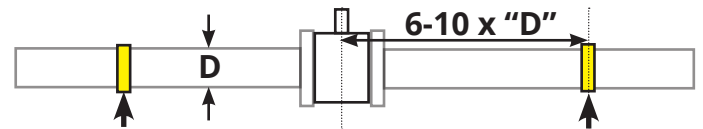

### Kuglehane med gevindender

DK



### Ball valve with threaded connection

UK

Kuglehane bør ikke adskilles inden installation. Gevindender kan pakkes med stort set alle former for pakmaterialer så som: Pakgarn, Teflontape, gevindsikring osv. Det tilrådes at holde kontra i den ende af kuglehane hvor røret tilspændes.

Do not disassemble ball valve before installation. Most regular sealing material can be used: Hemp, Teflon tape, Loctite ect. It is advisable to keep the counter at the end of the ball valve where the pipe is tightened.

### Kuglehane med svejsender

DK



### Ball valve with butt weld ends

UK

3-delt kuglehane i **rustfri** fra DVC kan TIG-svejses direkte ind i rørstrengen **uden adskillelse**. Det kræver blot, at kuglehane står åben, når man svejser. **NB:** skal der lægges flere svejsestrenges skal kuglehane, afkøles mellem svejsningerne.

3 -piece **stainless steel** ball valves from DVC can be TIG welded directly into the pipeline **without disassembling**. It only requires that the ball valve is open when welder. **Please note:** If more weld passes have to be made, please cool down the ball valve between weldings.

**Ved alle andre svejseformer end TIG-svejsning, skal kuglehane adskilles, inden svejsning foretages!!!**

**For all other welding methods than TIG-welding the ball valve has to be disassembled before welding!!!**

- Ventilens midterpart kan godt blive siddende under punktsvejsning.
- Husboltene afmonteres og midterparten fjernes med kuglen i åben position.
- Færdiggør svejsningen.
- Midterparten indføres mellem rengjorte flanger uden af beskadige huspakningen
- Husboltene spændes jævnt med moment. Se værdierne i tabellen på næste side.

- The valve body can stay mounted during spot welding.
- Please disassemble body bolts and take out the valve body. The valve must be in open position.
- Complete the welding procedure.
- The valve body is slid back between cleaned flanges, without damaging the body gaskets.
- The body bolts are placed and tightened evenly. Please refer the the torque figures in the tabel, next page.

# Installationsvejledning 3-delt kuglehane Type 12-1310/12-1311



## Installation guide 3-pcs ball valve Type 12-1310/12-1311

DN10F/15R 3/8"	DN15F/20R 1/2"	DN20F/25R 3/4"	DN25F/32R 1"	DN32F/40R 1-1/4"	DN40F/50R 1-1/2"	DN50F/65R 2"	DN65F/80R 2-1/2"	DN80F/100R 3"	DN100F 4"
Type 1210 & Type 1310									
Type 1211 & 1311									
Tilspændingsmomenter for husbolte - Body bolt torque									
10 [Nm]	11 [Nm]	14 [Nm]	19 [Nm]	20 [Nm]	34 [Nm]	38 [Nm]	42 [Nm]	44 [Nm]	49 [Nm]
Tilspændingsmomenter for spindelmøtrik - Stem nut torque									
6,9 [Nm]	8,8 [Nm]	8,8 [Nm]	10,8 [Nm]	10,8 [Nm]	15,7 [Nm]	15,7 [Nm]	18,6 [Nm]	20,6 [Nm]	22,5 [Nm]
Efter tilspænding af spindelpakningen skal møtrikken løsnes mellem 20-60° til nærmeste flade ud for låseblivet After tightening the stem gasket the nut has to be loosened between 20-60° to nearest fixing point of the lock saddle									

### Tilspænding af husbolte

DK

Tilspænding af husboltene skal foregå ensartet og jævnt. For at indspænde sæderinge og huspakninger korrekt, skal momenterne i tabellen ovenfor følges.




### Tightening the body bolts

UK

Tighten the body bolts evenly and steady. To ensure correct compression of gaskets please apply the torque figures in the tabel above.




DN10-DN50

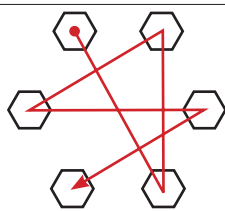

DN65-DN100

Husbolte  
Body bolts

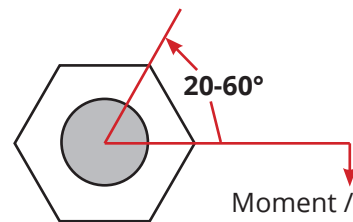

Spindelmøtrik  
Stem nut

Moment / Torque

### Tilspænding af spindelmøtrik

DK

I forbindelse med udskiftning af spindelpakninger eller efterspænding af pakdåsen er det vigtigt at følge de i tabellen anførte momenter. Efterfølgende skal spindelmøtrikken løsnes lidt for at sikre funktionen af fjedreskiverne (20-60° til nærmeste flade ud for låseblivet).



### Tightening the stem nut

UK

During replacement of stem gaskets or during maintenance, it is of great importance to tighten the stem nut according to the figures given in the tabel. After tightening the stem nut it must be loosened to ensure proper function of the spring washers (20-60° to nearest fixing point of the lock saddle).

### Oversigt over ventilens enkeltdele


DK




### Individual parts of the valve

UK

1210 WCB 1+2  
1310 CF8M 1+2

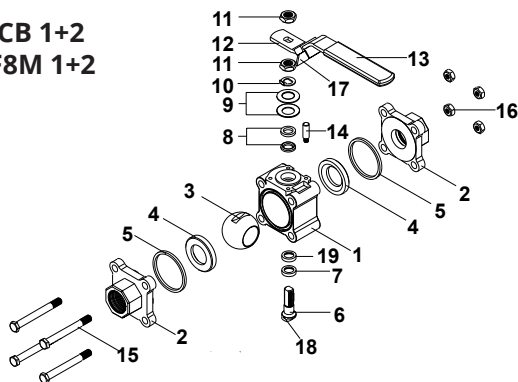

1211 WCB 1+2  
1311 CF8M 1+2

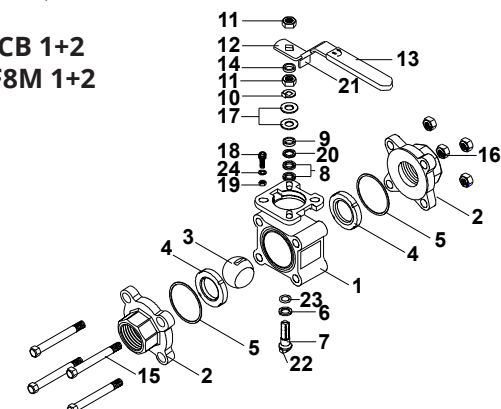

POS	DK	1210 & 1310	UK	DK	1211 & 1311	UK
1	HUS	BODY	HUS	BODY		
2	TILSLUTNING	CONNECTION	TILSLUTNING	CONNECTION		
3	KUGLE	BALL	KUGLE	BALL		
4	SÆDERINGE	SEAT PACKING	SÆDERINGE	SEAT PACKING		
5	HUSPAKNING	JOINT GASKET	HUSPAKNING	JOINT GASKET		
6	SPINDEL	STEM	SPINDEL	STEM		
7	PYRAMIDESKIVE	PYRAMID SEGMENT	SPINDEL	STEM		
8	SPINDELPAKNING	STEM SEAL	SPINDELPAKNING	STEM SEAL		
9	TALLERKENFJEDRE	BELLEVILLE WASHER	BØSNING	GLAND		
10	SIKRINGSSKIVE	LOCK SADDLE	SIKRINGSSKIVE	LOCK SADDLE		
11	SPINDELMØTRIK	STEM NUT	SPINDELMØTRIK	STEM NUT		
12	HÅNDTAG	HANDLE	HÅNDTAG	HANDLE		
13	GREB	HANDLE SLEEVE	GREB	HANDLE SLEEVE		
14	STOP	STOP BOLT	SKIVE	WASHER		
15	HUSBOLT	BOLT	HUSBOLT	BOLT		
16	MØTRIK	NUT	MØTRIK	NUT		
17	LÅSEBLIK	LOCKING DEVICE	TALLERKENFJEDRE	BELLEVILLE WASHER		
18	ANTISTATISK SIKRING	ANTI-STATIC DEVICE	STOP	STOP BOLT		
19	O-RING	O-RING	MØTRIK	NUT		
20			GLIDERING	BUSHING		
21			LÅSEBLIK	LOCKING DEVICE		
22			ANTISTATISK KUGLE	ANTI-STATIC DEVICE		
23			O-RING	O-RING		
24			SKIVE	WASHER		

### Skift af kuglehanens sæderinge

DK




### Replacement of ball valve seats

UK

**Forbrug: 2 x sæderinge, 2 x huspakning, evt. ny kugle.**

1) Åbn først kuglehanen. Løsn og fjern herefter alle husboltene på nær en enkelt bolt/møtik i bunden af kuglehanen. Kuglehanens midterpart svinges herefter ud af rørsystemet, hvorefter sæderingene kan afmonteres og inspiceres.

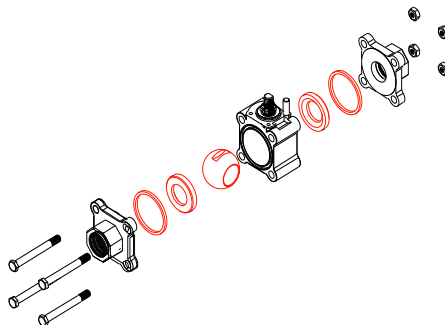

**Parts: 2 x seat, 2 x joint gasket, if necessary a new ball.**

1) First open the ball valve. Loosen and remove all the house bolts but one in the bottom of the valve. Here after the center part of the ball valve is swung out, where upon the seats can be dismantled and inspected.

**FARE!!!** Vær opmærksom på at der kan være indespærret medie i hulrummet bag kuglen.



**DANGER!!!** Be aware that media may be trapped in the cavity behind the ball.

2) Luk evt. kuglehanen for at kontrollere om overfladen har kraftige slidmærker. Er kuglens overflade beskadiget/ridset tilrådes det også at udskifte kuglen for at forlænge levetiden på sædepakningerne. Man kan undlade at skifte ventilens huspakninger, men DVC tilråder altid at skifte disse, så man undgår lækage udadtil. De gamle huspakninger fjernes med en skarp genstand og kan ikke genbruges.

2) Optionally: Close the valve to inspect the surface for wear and tear. If the latter is the case, it is advised to replace the ball in order to prolong the lifespan of the seats. It is possible to avoid replacement of the valves joint gaskets, although replacement is advised to avoid external leakage. The old joint gaskets are dismantled with a sharp object, and are not reusable.

3) Isæt evt. den nye kugle, huspakninger samt sæderinge. Man kan med fordel smøre den del af sædepakningen, der vender mod kuglen, med en egnet fedt eller produkt for at undgå rivning, mens sæderne tilpasses kuglens runding. Vær opmærksom på at huspakningerne er trykket godt ned i recessen på ventilhuset.

3) Insert the new ball (if needed), seats and joint gaskets. It is advised to grease the part of the seat that faces the ball, with a suitable grease or medium to avoid damage while the seats are shaped to the ball. Pay attention that the seats are pressed firmly into the body recess.

4) ÅBEN nu kuglehanen. Forsigtigt svinges midterparten af kuglehanen tilbage mellem rengjorte flanger. Vær opmærksom på at huspakningerne ikke beskadiges ved denne procedure. Efterfølgende monteres alle husbolte og møtrikker, hvorefter disse krydspændes jævnt til momenterne i tabellen er opnået. Betjen forsigtigt kuglehanen frem og tilbage nogle gange for at forme de nye sæderinge. Herefter kan evt. aktuator monteres.

4) Now open the ball valve. Carefully 'swing' back the center part between the cleansed flanges. Be aware that the procedure does not damage the joint gaskets. Mount all body bolts and nuts, and cross-tighten them evenly according to the listed torques. Operate the ball valve back and forth a few times to shape the new seats. After this, the actuator may be mounted.

### Efterspænding af spindelpakdåse


DK



### Retightening the stem packing

UK

1) Spindelpakdåsen på en 3-delt kuglehane fra DVC er forsynet med en "live load" anordning, hvilket vil sige, at pakdåsen holdes sammenspændt ved hjælp af tallerkenfjedre, der optager forskelle i temperaturudsving samt evt. slitage. Hvis pakdåsen skulle blive utæt, kan det skyldes, at pakningerne er slidt mere end fjedrene kan optage. Man kan som udgangspunkt efterspænde sin pakdåse for at løse dette problem. Dette gøres ved at frigøre låseblivet, der fastholder spindelmøtrikken og efterspænde spindelmøtrikken. Vær opmærksom på at tallerkenfjedrene sammenspændes i henhold til momenttabellen og løsnes let. Husk at fæstne låseblivet igen ud fra en af møtrikkens seks flader. Skulle ventilens pakdåse stadig være utæt, bør denne udskiftes.

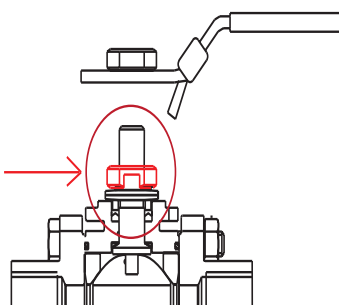

1) On a 3-piece ball valve from DVC the stem packing is fitted with a "live load" device, which means that the packing is held tight by a pair of Belleville washers that keep the packing functional during changes in temperature and wear. Should the packing begin to leak, it may be too worn for the washers to deal with. Generally the leaking is stopped by retightening the packing according to the table. This is done by removing the lock saddle that retains the nut and then tighten it. Pay attention not

to fully tighten the Belleville washers, because it will disable the "live load" functionality. Remember to re-fasten the lock saddle. If the packing is still leaking replacement is necessary.

### Udskiftning af spindelpakdåse

DK




### Replacing the stem packing

UK

**Forbrug: 2 x sæderinge, 2 x huspakning, 1 x spindelpakdåse-kit, evt. ny kugle.**

1) ÅBEN først kuglehanen. Frigør låseblivet der fastholder spindel møtrikken og løsn møtrikken. Løsn og fjern herefter alle husboltene på nær en enkelt bolt/møtrik i bunden af kuglehanen. Kuglehanens midterpart svinges herefter ud af rørsystemet, hvorefter sæderingene og kuglen kan afmonteres. Kuglen skal være lukket, for at denne kan tages ud af huset.

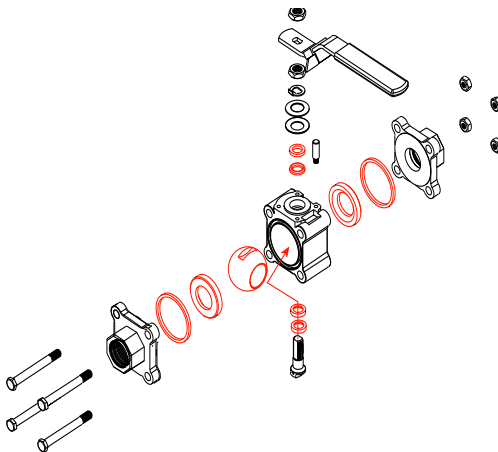

**Parts: 2 x seat, 2 x joint gasket, 1 x stem packing kit, if necessary a new ball.**

1) OPEN the ball valve. Release the lock saddle that retains the stem nut and loosen the nut. Loosen and remove all the house bolts but one in the bottom of the valve. Here after the center part of the ball valve is swung out, where after the seats and ball can be dismounted. The valve must be closed in order for the ball to be removable from the body.

**FARE!!!** Vær opmærksom på at der kan være indespærret medie i hulrummet bag kuglen.



**DANGER!!!** Be aware that media may be trapped in the cavity behind the ball.

2) Fjern nu spindelmøtrik samt låseblivet, skive og tallerkenfjedre. Ventilspindlen kan nu trykkes ned i ventilhuset og udtages sammen med den indvendige spindelpakning. Indvendig pakning samt o-ring tages af spindlen. Pakdåsens udvendige pakninger kan nu tages op af kuglehanens midterpart med en spids genstand og kan herefter ikke genbruges.

2) Now remove the stem nut, lock saddle, washer and Belleville washers. Apply pressure on top of the stem and remove it through the valve body along with the internal stem packing. Remove the internal packing and seal from the stem. The external part of the packing can now be removed from the valve body with a sharp object and may not be reused.

3) Rengør omhyggeligt kuglehanen og spindlen, inden nye pakninger monteres. Isæt udvendige pakninger (V-ringe). Påmonter spindlen den indvendige pakning samt o-ring og isæt spindlen i ventilhuset. Påmonter tallerkenfjedre, skiver, låseblivet samt spindelmøtrik og sammenspænd pakdåsen. Vær opmærksom på at tallerkenfjedrene ikke sammenspændes helt, da dette vil ødelægge "live load" funktionen, se momenttabel. Husk at fæstne låseblivet igen ud fra en af møtrikkens seks flader.

3) Thoroughly clean the ball valve and stem before mounting the new packing. Fit the external seals (V-rings). Fit the internal seal and o-ring and place the stem inside the valve body. Fit the Belleville washers, the ordinary washers, the lock saddle and the stem nut, and tighten the packing. Pay attention not to wholly tighten the Belleville washers, because it will disable the "live load" functionality. Remember to re-fasten the lock saddle.

4) Isæt kugle samt nye huspakninger og sæderinge. Man kan med fordel smøre sæderingene, der vender mod kuglerundingen, med en egnet fedt eller produkt for at undgå rivning mens sæderne tilpasses kuglens runding. Vær opmærksom på at huspakningerne skal være trykket godt ned i recessen på ventilhuset.

4) Insert the ball, the new joint gaskets and seats. It is advised to grease the part of the seat that faces the ball, with a suitable grease to avoid damage while the seats are shaped to the ball. Pay attention that the seats are pressed firmly into the body recess.

5) ÅBEN nu kuglehanen. Forsigtigt svinges midterparten af kuglehanen tilbage mellem rengjorte flanger. Vær opmærksom på at huspakningerne ikke beskadiges ved denne procedure. Efterfølgende monteres alle husbolte og møtrikker, hvorefter disse krydspændes jævnt, til momenterne i tabellen er opnået. Betjen forsigtigt kuglehanen frem og tilbage nogle gange for at forme de nye sæderinge. Herefter kan evt. aktuator monteres.

5) Now open the ball valve. Carefully 'swing' back the center part between the cleansed flanges. Be aware that the procedure does not damage the joint gaskets. Mount all body bolts and nuts, and cross-tighten them evenly according to the listed torques. Operate the ball valve back and forth a few times to shape the new seats. After this, the actuator may be mounted.

### Brug for hjælp?

DK



### Need help?

UK

Er der spørgsmål, eller har du brug for reservedele er man mere end velkommen til at kontakte:

If you have any questions or need spare parts do not hesitate to contact:

Dansk Ventil Center A/S. +45 75 72 33 00

Dansk Ventil Center A/S. +45 75 72 33 00